
## Work instructions:

i

Replace timer on Cleanfix control unit

In addition to this manual you will find a video tutorial on our website at: <u>https://cleanfix.org/en/service/instructions-replace-timer</u>



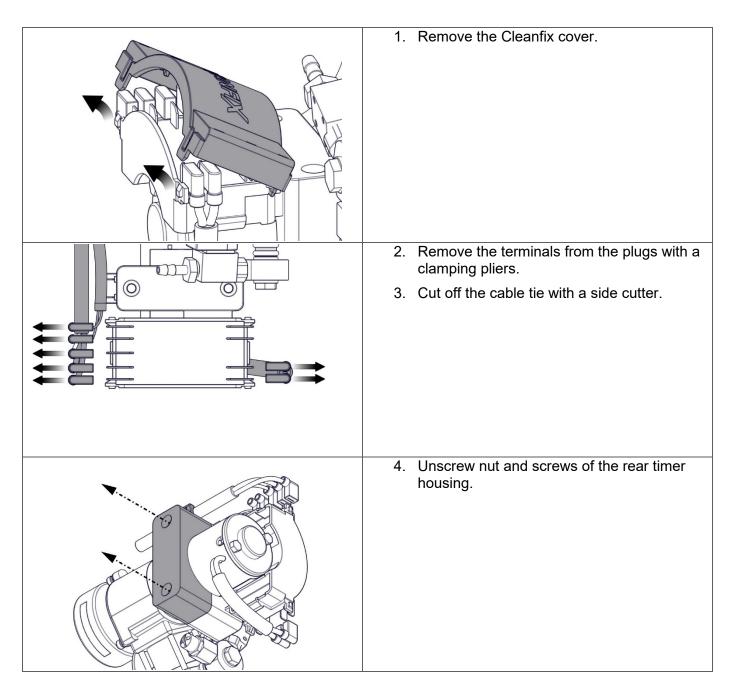



## Work instructions:



Replace timer on Cleanfix control unit

ANNO CONTRACTOR	5. Remove and dispose the front timer housing.
	6. Replace the new timer front housing.
	<ul> <li>7. Connect the terminals to the new plugs again.</li> <li>Valve -GND (blue) Valve +Plus (brown)</li> <li>Intermediate Cleaning (white) Power Supply -GND (black)</li> <li>Power Supply +12/24 VDC (red)</li> <li>8. Tie the electronic cables with cable ties</li> <li>9. Shorten excess lengths of cable ties.</li> </ul>
	10. Clip the Cleanfix cover back on.